

Rottendog Amusements

MPU327

Combination Williams System 3, 4, & 6 MPU and Driver Board

Installation Instructions:

- 1. With power OFF, remove the original MPU and Driver Board from the game**
- 2. Remove the two screws which hold the center support for the old MPU and Driver Board**
- 3. Remove the center support bracket.**
- 4. Fasten the MPU327 board where the original Driver Board was located with 4 corner screws**
- 5. Remove the cables from the 3 cable holders that run across the top left of the back box**
- 6. Set DIP switch DS3 to your specific game as shown in silk screen (leftmost 2 switches #1 and #2 not used but should be set to "00". Then set your game settings on the Dip Switch, please use 3 thru 8 for your game.**
- 7. Attach all of the connectors across the top of the MPU326 (1J3, 1J4, 1J5, 1J6, 1J7)**
- 8. Verify battery is still removed from MPU327**
- 9. Turn pinball machine to "ON"**
- 10. Verify LED's display "Audits" mode in player 1 and Ball & Credit score**
- 11. Attach battery while machine is still ON (Writing on Battery should be visible)**
- 12. Turn pinball machine to "Off"**
- 13. Attach all remaining connectors (note 1J8 is only used for System 7 games)**
- 14. Turn pinball machine to "ON" and play your game**

1/30/2018